

## LG Rumor Touch

The following instruction will give you all the information you need to remove your personal information from your phone. Before recycling your device please also remember to:

- The account for the device has been fully paid and service has been deactivated.
- Any headsets and chargers for the device are included with your donation. (These accessories also contain recyclable and salvageable materials).
- The SIM card is removed if there is one.
- If mailing your used device, be sure that the device and its accessories are packaged in a box or envelope using protective materials and securely attach a label to the box or envelope with its barcode visible.

## Data Erasing Instructions

#### Master Reset:

Home > Main Menu > Settings > Reset/Delete > Reset Phone.

#### Master Clear:

Home > Main Menu > Tools > Mass Storage > Format Memory Card.

#### Downloads:

Home > Main Menu > Settings > Reset/Delete > Downloaded Content.

#### Call List:

Home > Main Menu > Settings > Reset/Delete > Call Logs.

### Text Messages:

Home > Main Menu > Settings > Reset/Delete > Messages.



### Camera/Video:

Home > Main Menu > Settings > Reset/Delete > My Photos & Videos.

# Calendar/Organizer:

Home > Main Menu > Tools > Calendar > Delete > Delete All.