



## ***LG enV Touch***

The following instruction will give you all the information you need to remove your personal information from your phone. Before recycling your device please also remember to:

- The account for the device has been fully paid and service has been deactivated.
- Any headsets and chargers for the device are included with your donation. (These accessories also contain recyclable and salvageable materials).
- The SIM card is removed if there is one.
- If mailing your used device, be sure that the device and its accessories are packaged in a box or envelope using protective materials and securely attach a label to the box or envelope with its barcode visible.

### **Data Erasing Instructions**

#### **Master Reset:**

1. Menu > Settings & Tools > Phone Settings > Security.
2. Enter the four-digit lock code.
3. Press Reset Default.
4. Press OK after reading the message.
5. Highlight Revert and press OK.

#### **Master Clear:**

1. Menu > Settings & Tools > Phone Settings > Security.
2. Enter the four-digit lock code.
3. Press Restore Phone.

#### **Call List:**

Menu > Recent Calls > All > Options > Erase All.

#### **Text Messages:**

Menu > Messaging > Erase Options > Erase All.



**Camera/Video:**

Menu > Media Center > Picture & Video > My Pictures > Options > Erase All.

**Calendar/Organizer:**

Menu > Settings & Tools > Tools > Calendar > Options > Erase All.