



Sanyo, Katana LX

The following instruction will give you all the information you need to remove your personal information from your phone. Before recycling your device please also remember to:

- The account for the device has been fully paid and service has been deactivated.
- Any headsets and chargers for the device are included with your donation (These accessories also contain recyclable and salvageable materials).
- The SIM card is removed if there is one.
- If mailing your used device, be sure that the device and its accessories are packaged in a box or envelope using protective materials and securely attach a label to the box or envelope with its barcode visible.

Data Erasing Instructions

Master Reset: Menu > Settings > Security > Delete/Reset > Reset All Settings

Downloads: Menu > Settings > Security > Delete/Reset > Delete My Downloads

Call List: Menu > History > Options > Delete > Delete All

Text Messages: Menu > Settings > Security > Delete/Reset > Delete Message

Camera/Video: Menu > Settings > Security > Delete/Reset > Delete Pictures