



LG Venus Camera Phone

The following instruction will give you all the information you need to remove your personal information from your phone. Before recycling your device please also remember to:

- The account for the device has been fully paid and service has been deactivated.
- Any headsets and chargers for the device are included with your donation (These accessories also contain recyclable and salvageable materials).
- The SIM card is removed if there is one.
- If mailing your used device, be sure that the device and its accessories are packaged in a box or envelope using protective materials and securely attach a label to the box or envelope with its barcode visible.

Data Erasing Instructions

Master Reset:

1. Open the slide and touch Menu.
2. Touch the Down Arrow Touch Key to scroll to Settings, and touch OK.
3. Press 4 - Phone Settings.
4. Press 7 - Security.
5. Enter the four-digit lock code.
6. Press 6 - Reset Default.
7. Touch OK after reading the warning message.
8. Touch the Up/ Down Arrow Touch Key to select a Revert, then touch OK. A confirmation message is displayed briefly before the phone resets itself.

Call List:

1. Open the slide or unlock the phone and touch MENU.
2. Touch the Up Arrow Touch Key to scroll to Call History, and touch OK.
3. Press 4 - All Calls.
4. Touch the Up/ Down Arrow Touch Key to scroll to an entry
5. Touch OPTIONS to select Erase All



Text Messages:

1. Open the slide and touch .
2. Touch OK .
3. Press 3 - Inbox, 6 - Sent, and 7 - Drafts.
4. Options from the respective Menu touch OPTIONS.
5. Select Erase Inbox

Camera/Video:

1. Open the slide and touch MENU.
2. Touch the Down Arrow Touch
Key to scroll to Music & Media, and touch OK.
3. Press 4 - Pictures & Videos.
4. Press 3 - My Picturess.
5. Select a video with the Up/ Down/ Left/ Right Arrow